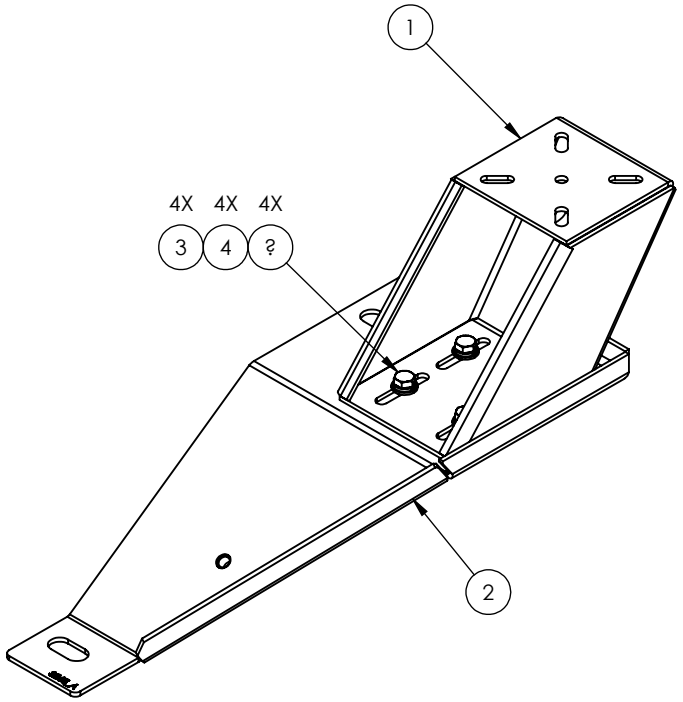

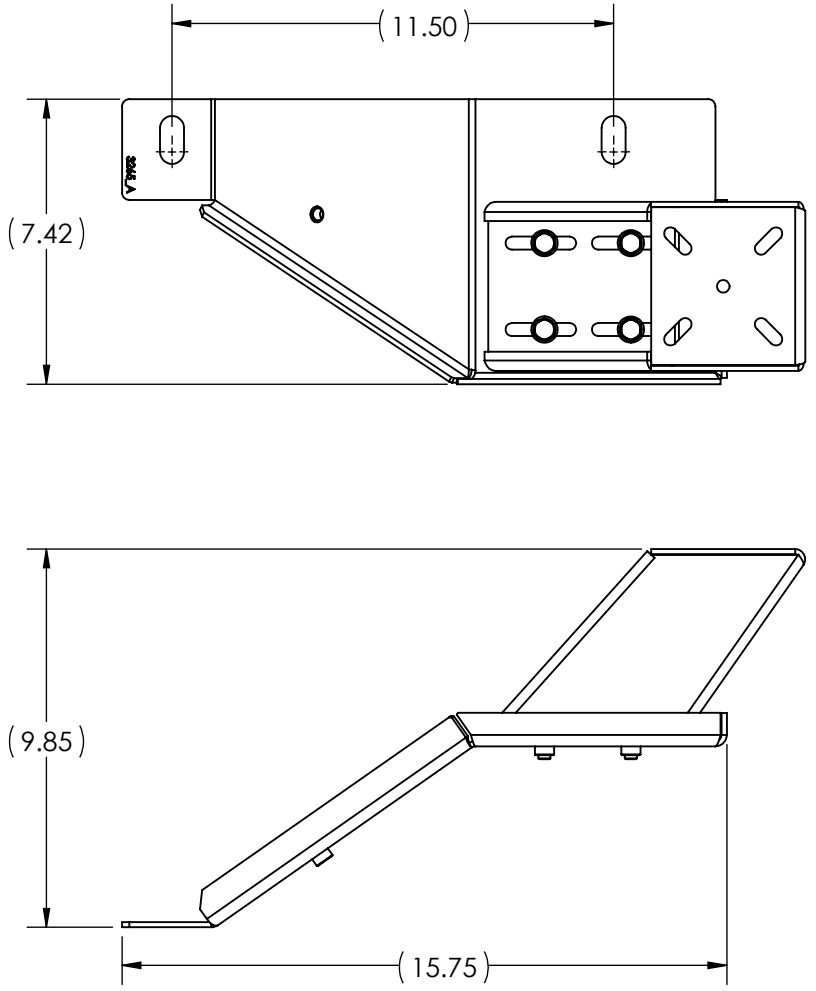

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	10-002531	BRACKET, MOUNT, 55 DEG. 5" LOWER OFFSET BASE W/ SLOTS
2	1	10-003265	ASSEMBLY, MOUNT, HDM BASE, JEEP LIBERTY
3	4	GSM31006	WASHER, 5/16" FLAT, SAE ZP
4	4	GSM31027	WASHER, 5/16" LOCK, ZP
5	4	GSM33011	SCREW, 5/16-18 X 3/4"

INSTALLATION INSTRUCTIONS

1. REMOVE PASSENGER SIDE FRONT SEAT BOLTS.
2. SLIDE BASE PLATE IN BETWEEN FLOOR AND SEAT BRACKETS.
3. REINSTALL OEM SEAT BOLTS AND TIGHTEN TO VEHICLE MANUFACTURER'S TORQUE SPECIFICATION.
4. ATTACH LOWER OFFSET TO BASEPLATE WITH 5/16" BOLTS, LOCK WASHERS AND FLAT WASHERS ANGLE TOWARDS CENTER OF VEHICLE.
5. FOLLOW GENERAL INSTRUCTIONS FOR POLE AND UPPER MOUNT PARTS.

HAVIS HAVIS, INC.
75 JACKSONVILLE RD,
WARMINSTER, PA. 18974
1-800-524-9900

TITLE: 02-09 JEEP LIBERTY HDM BASE

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-HDM-127-INST	B

WEIGHT (LB): 8.045	SCALE: 1:8	SHEET 1 OF 1